



普通书纸, A5大小, 单面印刷

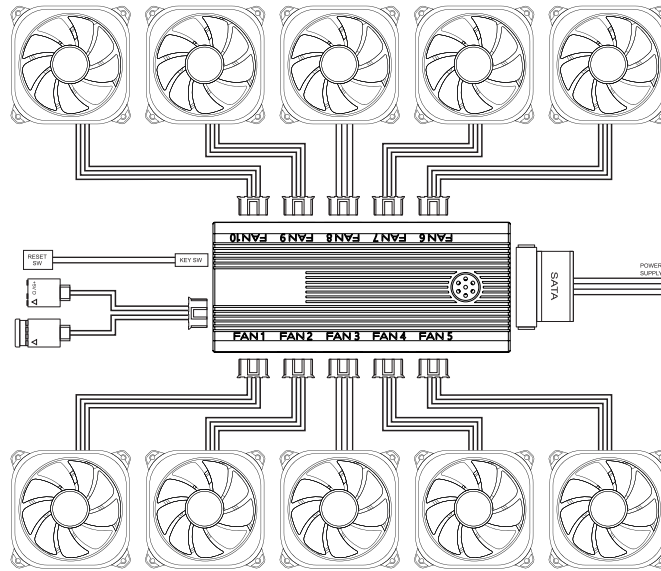

INPLAY ARGB CONTROLLER BOX DIAGRAM



INPLAY ARGB CONTROLLER REMOTE INSTRUCTION

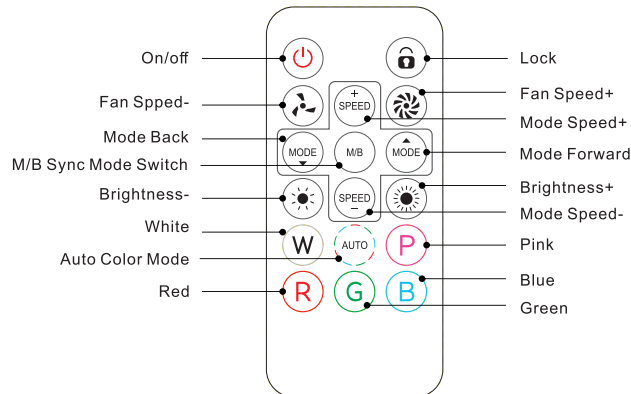

Rmark:

1. Remote Control Mode: Connect Hub to PSU SATA connector for Power. Press button "On" on the remote.
2. Switch Control Mode: It co-exists with Remote Control Mode. When it is under remote control mode, press LED or Reset Button (If case without LED Button) on case.
3. Motherboard Sync Mode: Connect Hub to Sata connector for Power. Connect 5V 3pin female connector to that on the motherboard.
4. Press "M/B" button on the remote to switch to M/B Sync Mode.