



HK430

HK430 Gaming Keyboard



System Requirements:

Windows XP/VISTA/WIN7/WIN8/ WIN10 /MAC

English
Size: 465X151X33MM
Weight: 1245g
Lifetime: 50,000,000times (times)
Current: 500mA
Type: high keycap ladder design
Quantity: 104 teclas, keycap de duas cores

Português
Tamanho: 465X151X33MM
Peso: 1245g
Tempo de vida: 50.000.000 vezes (vezes)
Corrente: 500mA
Tipo: design de escada alta keycap
Quantidade: 104 teclas, keycap de duas cores

Polski
Rozmiar: 465 x 151x 33 mm
Ciężar: 1245g
Żywotność: 50 000 000 razy (razy)
Napięcie prądu: 500 mA
Typ: konstrukcja wysokiej drabinki na klawisz
Ilość: 104 klawisze, dwukolorowe nasadki

Українська
Розмір: 465X151X33MM
Вага: 1245г
Термін служби: 50 000 000 разів (разів)
Струм: 500mA
Тип: високоякісний дизайн сходок ключів
Кількість: 104 ключі, двоколіровий кейсап

FN + F1 = Player
FN + F2 = Search
FN + F3 = Favorites
FN + F4 = Mute
FN + F5 = Stop
FN + F6 = Previous song
FN + F7 = Pause / Play
FN + F8 = Next song
FN + F9 = Mail
FN + F10 = URL
FN + F11 = Computer
FN + F12 = Calculator

FUNCTION DESCRIPTION:

1. Support common game mode button backlight and custom record button backlight function.
2. Support 12 kinds of stunning LED lighting special effects.
Standard version: FN + 1 to 5 keys are illuminated for fixed game user mode keys.
3. Support full key without punching.
Wave Mode, Neon Mode, Raindrop Mode, Ripple Mode, Wave Mode 2, Vortex Mode, Static Mode, Breath Mode, Gradual Light Running, Instant Light, Starry, Laser Mode
4. Support lock WIN function and LED light effect indication. After locking WIN and lock APP key at the same time, Win Lock is always on. After unlocking, Win Lock is off
5. Support potentiometer knob to adjust volume and brightness: the factory default is volume adjustment, when pressing the knob switch, it is light brightness adjustment (individual mode)
6. Support FN + ESC reset function, revert to the "wave mode" default light setting.
7. Support FN + SL front off / on backlight function
8. Support FN + PS custom picture recording function

LIGHT GRAPHIC SETTINGS:

FN + PS enters the video recording mode. At this time, the red light of the (1-5) button flashes. Press any one of the buttons (1-5) first to enter the recording mode. At this time, the four blue LEDs in the upper right corner indicate Flashing, you can press the button arbitrarily, the seven colors cycle switch until you like the color, and finally press FN + PS to save, the four indicator LEDs stop flashing, and the recording is successful.

LIGHT EFFECT MODE SWITCHING SEQUENCE:

FN + HM Four modes: horse racing, neon, static, breathing
FN + END Seven independent color adjustments
FN + PU brightness five-level cycle adjustment
FN + PD speed five-level loop adjustment
FN + PB Raceway light effect direction adjustment
FN + APP marquee stop or open adjustment

Gaming Keyboard

HK430 Gaming Keyboard

LIGHT EFFECT MODE SWITCHING SEQUENCE:

- Press FN + INS to enter "Wave Mode":
The backlight of the keyboard flows from left to right or from right to left in 7 colors.
Press the FN + DEL key combination to adjust the wave mode to stop or start.
Support FN + "← / →" key combination, adjustable left and right direction of light wave flow.
- Support FN + "↑ / ↓" five-level speed adjustment, support knob brightness adjustment.
- Press again to enter the "Neon mode":
The overall backlight brightness of the keyboard remains unchanged, and the color of the light changes in a colorful, color-by-color manner.
The adjusted memory parameters shall prevail.
- Support FN + "↑ / ↓" five-level speed adjustment, support knob brightness adjustment.
- Press again to enter the "raindrop mode":
The backlight of the keyboard slides down like raindrops on the window.
Press the FN + DEL key combination to switch between random colorful and 7 monochrome, a total of 8 colors can be adjusted.
- Support FN + "↑ / ↓" five-level speed adjustment, support knob brightness adjustment.
- Press again to enter "ripple mode":
Taking the pressed button as the center, a layer of colorful waves spread out to the surrounding waves, sparkling and surging, gradually moving away.
Press the FN + DEL key combination to switch between random colorful and 7 monochrome, a total of 8 colors can be adjusted.
- Support FN + "↑ / ↓" five-level speed adjustment, support knob brightness adjustment.
- Press FN + INS to enter "Wave Mode 2":
The backlight of the keyboard is in 7 colors, which spreads from inside to outside or gathers from outside to inside.
Support FN + "← / →" key combination, adjustable inside and outside direction of light wave flow.
- Support FN + "↑ / ↓" five-level speed adjustment, support knob brightness adjustment.
- Press again to enter the "vortex mode":
The keyboard backlight color is as if the wheel is spinning.
Press the FN + DEL key combination to switch between random colorful and 7 monochrome, a total of 8 colors can be adjusted.
- Support FN + "↑ / ↓" five-level speed adjustment, support knob brightness adjustment.
- Press FN + INS to enter "Static Mode":
The overall backlight of the keyboard is always bright, the brightness is based on the previously adjusted memory parameters, and the seven colors are adjustable.
Press the FN + DEL key combination to switch between 7 colors and automatic cycle jump.
- Support FN + "↑ / ↓" five-level speed adjustment, support knob brightness adjustment.
- Press again to enter the "breathing mode":
The overall backlight of the keyboard simulates the breathing rhythm, and the curve changes from off to the highest brightness. Brightness, color and breath
The rhythm speed is based on the previously adjusted memory parameters.
Press the FN + DEL key combination to switch between 7 colors and automatic cycle jump.
- Support FN + "↑ / ↓" five-level speed adjustment, support knob brightness adjustment.
- Press FN + INS to enter the "gradually bright horse race":
The backlight LED of the keyboard runs from left to right and lights up one by one, trailing and gradually disappearing. Line by line and then from right to left
Swipe twice, alternate left and right, and go down row by row.
Press the FN + DEL key combination to switch between 7 colors and automatic cycle jump.
- Support FN + "↑ / ↓" five-level speed adjustment, support knob brightness adjustment.
- Press FN + INS to enter the "press and light":
The backlight is off. By default, a backlight color lights up every time the button is pressed. After releasing the button, the button
The backlight of the LED goes out with a delay.
Press the FN + DEL key combination to switch between 7 colors and automatic cycle jump.
- Support FN + "↑ / ↓" five-level speed adjustment, support knob brightness adjustment.
- Press FN + INS to enter the "Starry Stars":
The backlight of the keyboard is like a starry night sky, colorful, blinking.
Press FN + DEL to blink the speed and quantity can be adjusted according to user preferences.
- Support FN + "↑ / ↓" five-level speed adjustment, support knob brightness adjustment.
- Press FN + INS to enter "laser mode":
The overall backlight of the keyboard is off, the brightness / speed is based on the previously adjusted memory parameters, and the color is adjustable.
Press the FN + DEL key combination to switch between random colorful and 7 monochrome, a total of 8 colors can be adjusted.
- Support FN + "↑ / ↓" five-level speed adjustment, support knob brightness adjustment.