


HM420

English

 
Middle key

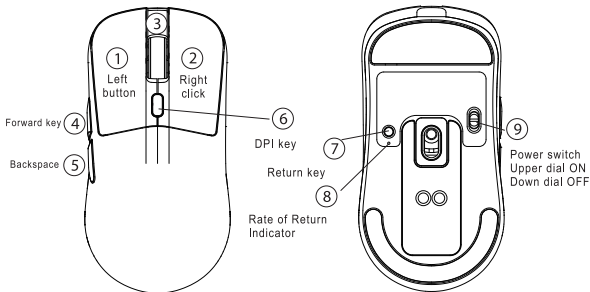

① Rechargeable/wired connection for use



② 2.4G connection



SYSTEM REQUIREMENTS:

WinXP/Win7/Win8/Win10/Win11/Macos

Size: 124*62.1*38.9MM

Body weight: 62±2G

Life: 60,000,000times (times)

Acceleration: 50g

DPI: 400/800/1600/3200/4800

Electrical parameters

Working voltage: USB wired:DC5V $\pm$ 5% Wireless:DC3.7V

Working current: USB wired: <50mA

Bottom sensor light: infrared light

Maximum resolution: 26000DPI (driver can be set)

DPI factory default settings: 5-segment adjustment: 400 red, 800 blue (default), 1600 green, 3200 purple,

4800 yellow Wired / 2.4G return rate: bottom button adjustable: red 125HZ, blue 500HZ (default),

green 1000HZ, purple 2000HZ, yellow 4000HZ, white 8000HZ

Synchronized change with return rate: 8ms/2ms (default)/1ms/0.5ms/0.25ms/0.125ms

FPS image processing: 26000fps

Maximum speed: 650ips

Lithium Battery Capacity

Capacity 500MAH

1K battery life 125 hours with light off, 71 hours with light on

8K battery life 35 hours with lights off, 29 hours with lights on.

(The above data for wireless 2.4G engineering test mode, according to the actual use of the environment slightly deviated)

Computer Connection Method

Wireless mode is plug and play, wired and wireless at the same time the state, priority recognition for the wired mode

Wake from Hibernation

After 5 seconds, it will enter the first level of hibernation mode; after 60 seconds, it will enter the second level of hibernation mode.

In hibernation mode, the mouse can be woken up by clicking or moving.

Charging indication

When the data cable is connected to the mouse or placed in the holder to charge, the scroll wheel position indicator light is red and always on, indicating that it is charging, and goes out when it is full. (Charging time about 2-3 hours) Note: This product supports up to DC5V charging voltage and 250MA charging current, we are not responsible for any problems caused by improper charging.

low battery indicator

Scroll wheel position indicator light yellow flashing, for low power tips, need to charge to ensure the normal use of the mouse (According to the actual use of a slight deviation)

2.4G indicator

When the bottom switch is flicked to the ON icon, the green light at the wheel position lights up for three seconds and goes out.

2.4G pairing operation

When the bottom switch is dialled to the ON icon, press the left middle and right buttons at the same time, the green light at the position of the scroll wheel blinks, and it enters the pairing state.

At this time, you need to insert the receiver, after successful connection, the indicator light goes out.

(Note: the factory has been paired OK, such as 2.4G without function, you can follow this step)

wired mode

When a Type-c cable is plugged in to connect, priority is given to connecting in wired mode.

light effect

Simultaneously press the middle button + forward for 2 seconds (Adjustment modes: Always On, Breathing, Mixed Colour, Off)

Press the middle button + back at the same time for 2 seconds (to adjust the colours in normal light and breathing mode).

Seat Charger Receiver

With RGB ambient lighting effect, can be placed to charge the mouse

Optical ICs

PAW3395

drive

Windows only

Wireless transmission distance

Measured distance to office environment approx. 10 metres

working conditions

Temperature: -10°C to 50°C

Humidity: 10-90 per cent RH

Seat charger receiver instructions for use

For the best wireless experience, it is recommended to place the docking receiver 10cm closer to the mouse for lower latency and less interfering signals.

